





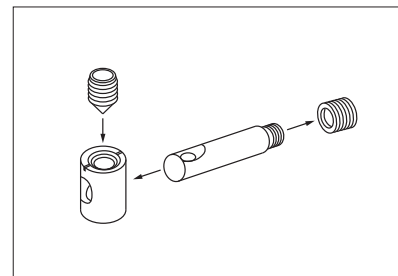


Aufbauanleitung 01/2022

WERKZEUG:


Innensechskantschlüssel SW4 und SW5 (beiliegend)

- 12 x XS Stahldübel 
- 12 x Verbindergehäuse 
- 12 x Madenschrauben 
- 24 x Confirmat Schrauben (5x50) 
- 2 x Senkkopfschrauben (M8x50) 
- 2 x MittelfüÙe, verstellbar 




Bitte beachten Sie die Funktionsweise der Beschläge:
<https://www.youtube.com/watch?v=ioIUTDqtvgE>

Führen Sie den Aufbau des Bettes **auf einer weichen Unterlage (z.B. einer Decke)** aus, um Beschädigungen zu vermeiden.

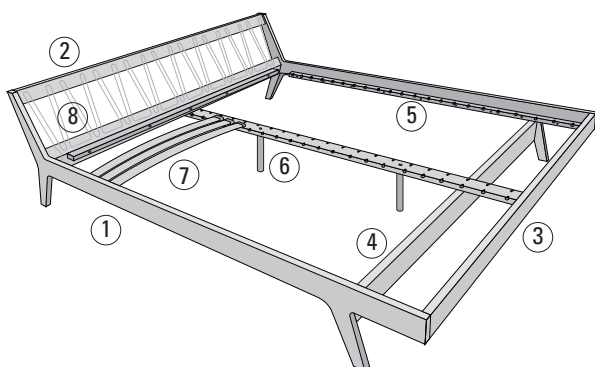


- 1** Längsseiten
- 2** Kopfteile
- 3** Fußteil
- 4** unterer Querbalken


- 5** seitliche Auflageleisten
- 6** Mittelsteg und MittelfüÙe
- 7** Federleisten und Kautschukkappen
- 8** Lederschnur

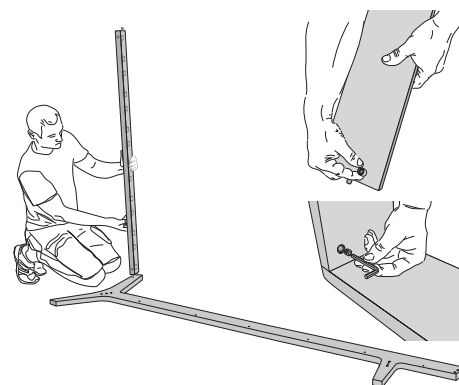


1. Drehen Sie alle XS Dübel in die Längsseiten (1) und stecken Sie die Verbindergehäuse in die dafür vorgesehenen Bohrungen. Bolzen und Gehäuse richtig ausrichten! Die zwei Kopfteile (2) auf die Längsseite (1) aufstecken und mit Madenschrauben fixieren.

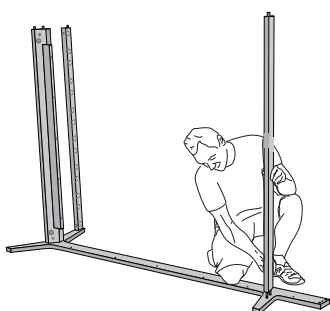


2. Stecken Sie den unteren Querbalken (4) auf die Längsseite (1) und montieren diesen.

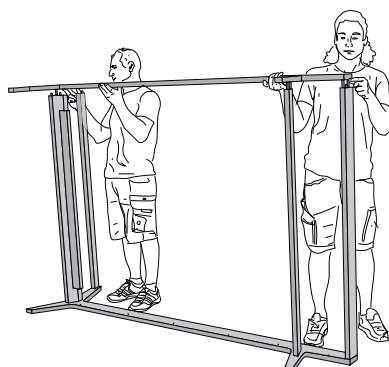


3. Befestigen Sie nun das Fußteil (3) an der Längsseite (1). Stecken Sie anschließend die zweite Längsseite (1) auf die bereits zusammengebauten Teile und fixieren sie.

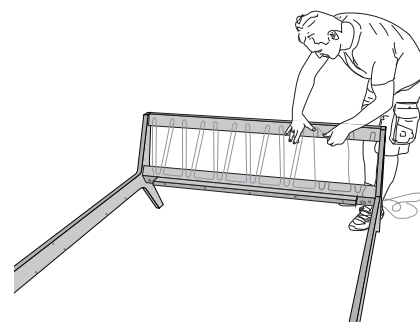


4. Fädeln Sie die Lederschnur (8) durch die Vertiefungen im Kopfteil (2). Ziehen Sie die Schnur nur leicht an und fixieren Sie sie mit den Spannern.

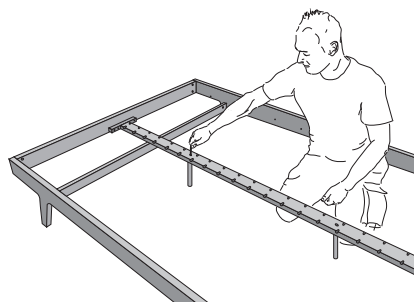

5. Befestigen Sie die mittlere Auflageleiste (6) und schrauben Sie die MittelfüÙe mit den Senkkopfschrauben an den Mittelsteg.

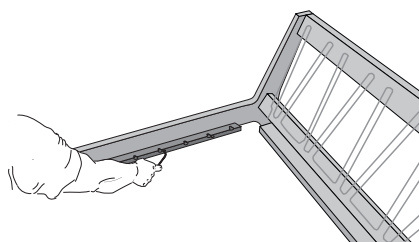

6. Bringen Sie die seitlichen Auflageleisten (5) mit den Confirmat Schrauben an den Bettseiten (1) an.

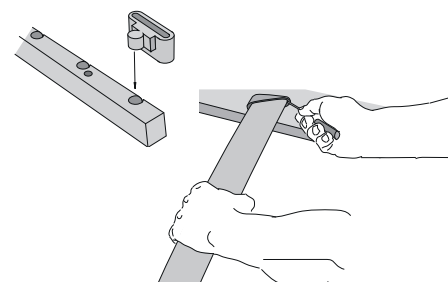







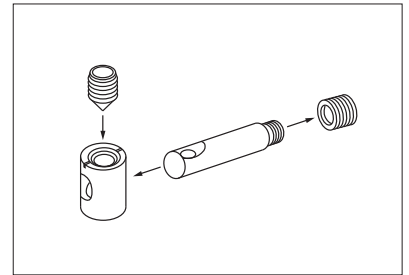
7. Setzen Sie die Kautschukkappen (7) in die entsprechenden Bohrungen der Auflageleisten und stecken Sie die Federleisten ein.

Assembly instructions 01/2022

TOOLS:


Allen key SW4 and SW5 (enclosed)

- 12 x XS steel dowels 
- 12 x connector housings 
- 12 x grub screws 
- 24 x Confirmat screws (5x50) 
- 2 x countersunk screws (M8x50) 
- 2 x center support feet, adjustable 




Watch this video for further information on the metal fitting:
<https://www.youtube.com/watch?v=ioiUTDqtvvE>


Please assemble the bed on a soft surface (e.g. a carpet or blanket) to avoid damages.

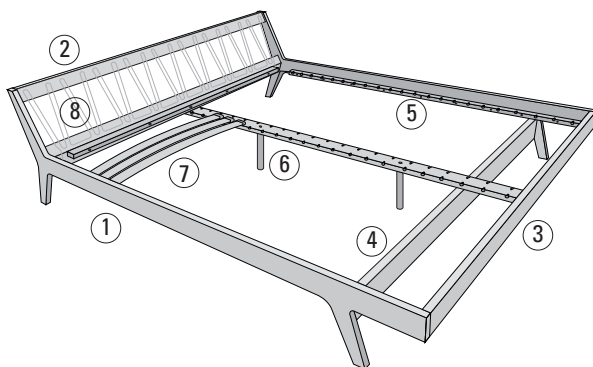


- 1** side rails
- 2** headboard
- 3** footboard
- 4** cross bar
- 5** support bars
- 6** center rail and center support feet
- 7** sprung slats and rubber caps
- 8** leather cord

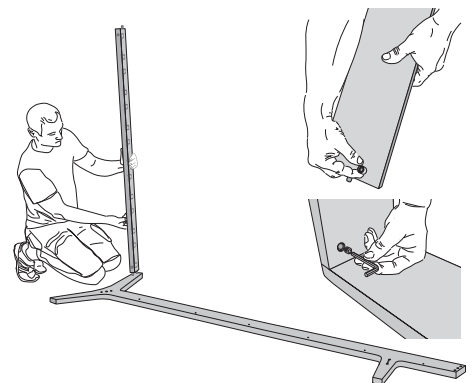

1. Screw steel dowels into the side rails (1). Insert connector housings into headboard (2), footboard (3) and cross bar (4). Ensure that dowels and housings are aligned correctly. Place the bars of the headboard (2) on one of the side rails (1) and fix the connectors using the allen key.

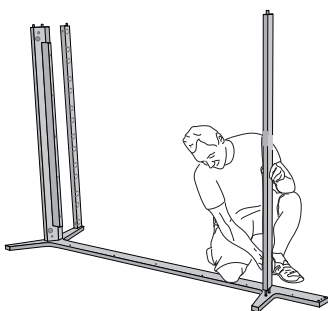


2. Attach the cross bar (4) to the side rail (1).

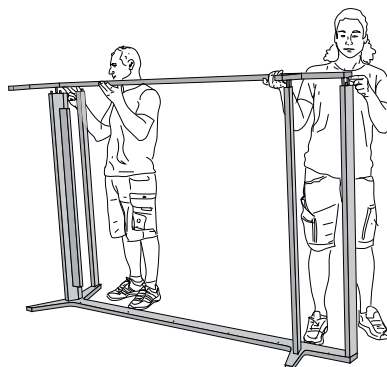


3. Attach the footboard (3) to the side rail (1). Place the second side rail on top of the parts that are already assembled.




4. Thread the leather cord (8) through the slots in the headboard (2). Before fixing it, tighten the cord slightly.

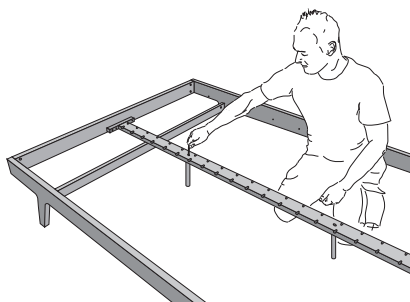

5. Attach the center rail (6) and fasten the center support feet to the center rail.

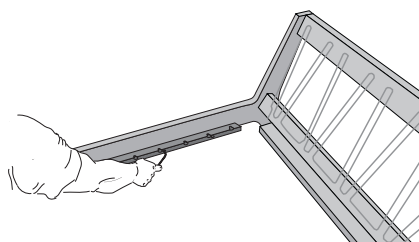

6. Attach the support bars (5) to the side rails (1) using confirmat crews.

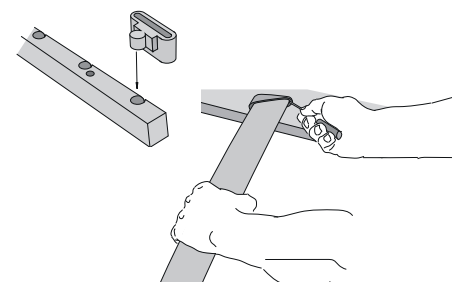

7. Insert the rubber caps (7) into the holes in the mattress supports and fit the sprung slats into the rubber caps.