VERMU

ZEITRAUM

Aufbauanleitung 12/2020

WERKZEUG:

Innensechskantschlüssel SW4 / SW5 (beiliegend)

4x Zylinderkopfschrauben M 8 x 25

6x Senkkopfschraube M 6 x 16

*Aufbau des Tisches auf einer **weichen Unterlage (z.B. einer Decke)** durchführen, um Beschädigungen zu vermeiden.*

Reihenfolge Aufbau:

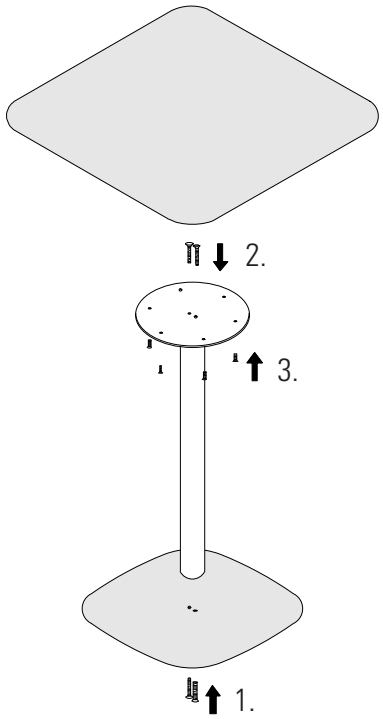

Verschraubung Tischgestell:

1. Bodenplatte mit dem Tischbein verschrauben.
Schrauben fest anziehen. Anzugsmoment 70 Nm.

2. Anschließend die runde Kopfplatte mit dem Tischbein verschrauben.
Auch hier die Schrauben fest anziehen. Anzugsmoment 70 Nm.

3. Zuletzt das komplette Gestell mit der Tischplatte verschrauben.

ZEITRAUM GmbH · Äußere Münchner Str.2 · D-82515 Wolfratshausen · Tel +49 (0)8171 - 418130 · Fax +49 (0)8171 - 418141 · info@zeitraum-moebel.de · www.zeitraum-moebel.de

VERMU

ZEITRAUM

Assembly Instructions 12/2020

TOOLS:

Allan key SW4 / SW5 (enclosed)

4x Cylinder head screw M 8 x 25

6x Countersunk head screw M 6 x 16

*Assemble table on a **soft surface (e.g. blanket)** to avoid damage.*

Order of assembling:

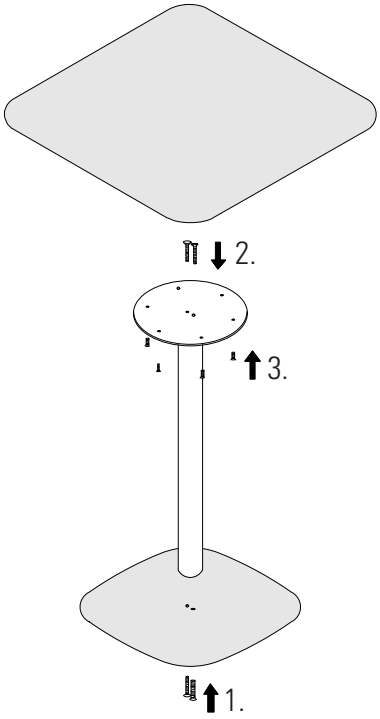

Assembling table frame:

1. Screw base-plate together with the central bar.
Tighten screws firmly. Screw tightening torque 70 Nm.

2. Screw the round head- plate together with the central bar.
Again tighten the screws firmly. Screw tightening torque 70 Nm.

3. Screw the complete table leg together with the wooden table top.

ZEITRAUM GmbH · Äußere Münchner Str.2 · D-82515 Wolfratshausen · Tel +49 (0)8171 - 418130 · Fax +49 (0)8171 - 418141 · info@zeitraum-moebel.de · www.zeitraum-moebel.de