

CENA HIGH BANK


ZEITRAUM

Aufbauanleitung 11/2024

WERKZEUG:

Innensechskantschlüssel SW 5 (beiliegend) und SW 6


4 x XS Stahldübel



8 x Zylinderschraube M6 x 70



8 x XS Stahldübel




8 x Beilagscheibe



12 x Verbindergehäuse





12 x Madenschrauben




Funktionsvideo:
<https://www.youtube.com/watch?v=iolUTDqtvgE>

Aufbau der Bank auf einer **weichen Unterlage (z.B. einer Decke)** durchführen, um Beschädigungen zu vermeiden.

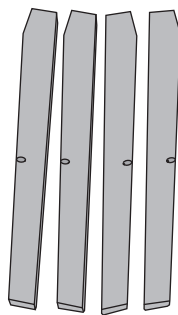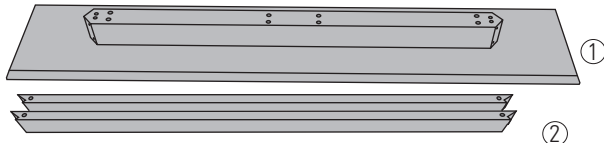


- 1 Sitzfläche mit Längszarge
- 2 Fußzargen
- 3 Fußelemente


1. Die Längszarge von der Sitzfläche abmontieren.

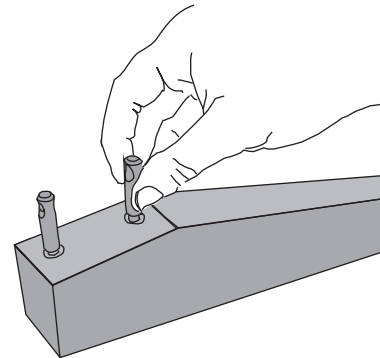


2. Die XS- Dübel in die Fußelemente eindrehen und dabei auf die vertikale Ausrichtung der Aussparung achten.

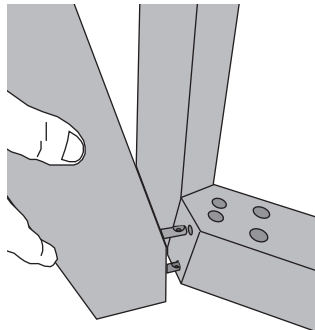


3. Verbindergehäuse in die Längszarge stecken und auf richtige Ausrichtung achten. Die Füße an die Längszarge stecken und die Verbinder mit den Madenschrauben **nur leicht anziehen!**

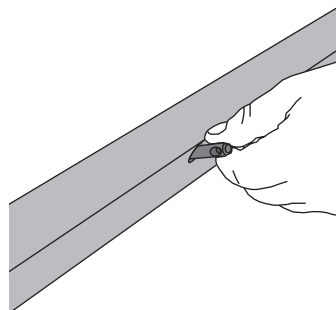


4. Die langen XS- Dübel in die Fußelemente eindrehen.

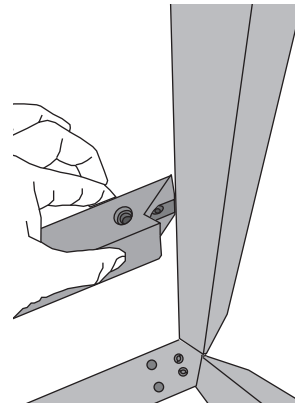

5. Verbindergehäuse in die Fußzargen stecken und mit den Madenschrauben an den Fußelementen befestigen.
Anschließend auch die Verbinder in der Längszarge fest anziehen!

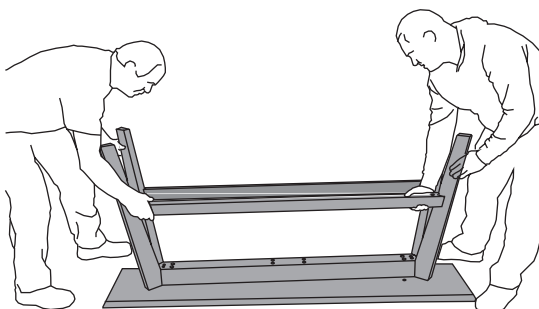

6. Das komplette Gestell auf die Sitzfläche montieren. Dazu die Zylinderschrauben und die Beilagscheiben verwenden.

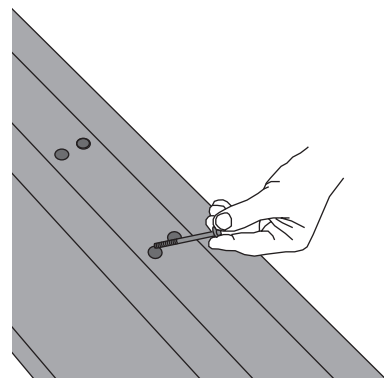

CENA HIGH BANK


ZEITRAUM

Assembly instructions 11/2024

TOOLS:

allen key SW5 (enclosed), SW 6

4 x XS steel bolts



8 x cylinder head screws (M6 x 70)



8 x XS steel bolts



8 x flat washers




12 x connector housings





12 x grub screws



Please assemble the bench **on a soft surface (e.g. a carpet or blanket)** to avoid damages.




Video:
<https://www.youtube.com/watch?v=ioiUTDqtvvE>

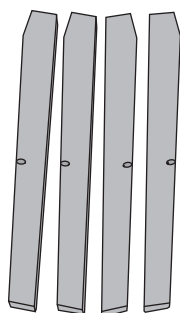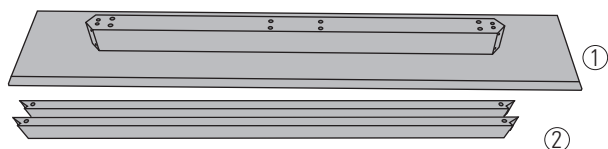


- 1 bench seat with frame
- 2 leg frame
- 3 leg elements


1. Remove the frame from the bench seat.

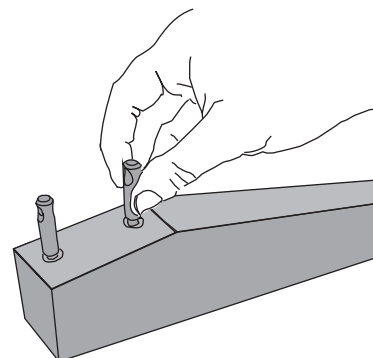


2. Screw the short XS steel bolts into the legs. Ensure that bolts are aligned correctly.

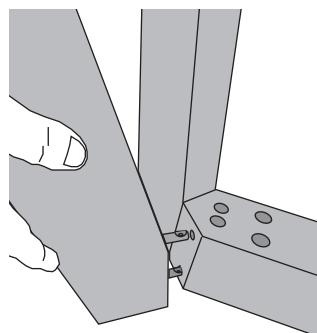


3. Insert connector housings into the holes in the frame. Attach the legs to the frame and only lightly tighten the connectors with the grub screws!

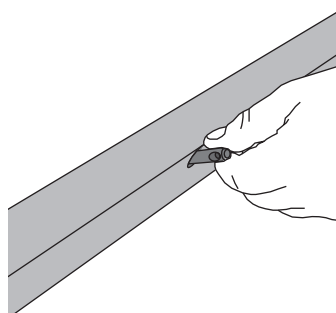

4. Screw the long XS steel bolts into the legs.

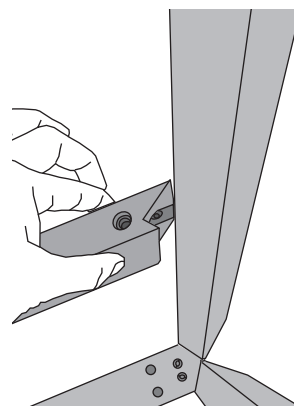

5. Insert the connector housings into the leg frames and fasten them by using the grub screws. **Connect all other connectors tightly as well.**

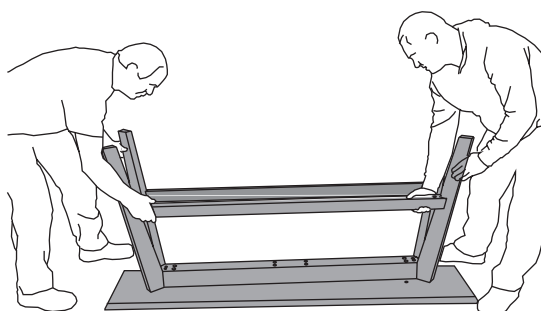

6. Fit the complete frame onto the seat. Use the cylinder head screws and washers for this.

